
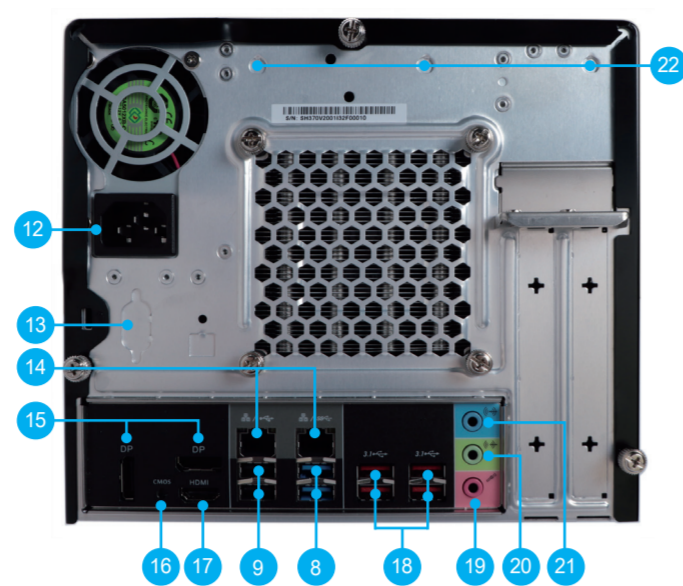


More information on this product can be found at: <http://bit.ly/SH370R6V2>
更多本產品資訊，請查閱：<http://bit.ly/SH370R6V2>
Weitere Informationen zu diesem Produkt finden Sie unter: <http://bit.ly/SH370R6V2>
Pour plus d'informations sur ce produit, visitez: <http://bit.ly/SH370R6V2>

Puede encontrar más información sobre este producto en: <http://bit.ly/SH370R6V2>
本製品の詳細な情報については、次の URL より確認頂けます。<http://bit.ly/SH370R6V2>
Для получения дополнительной информации об этом продукте перейдите по ссылке: <http://bit.ly/SH370R6V2>
更多本產品資訊，請查閱：<http://bit.ly/SH370R6V2>

Product Overview

產品外觀 \ Produktübersicht \ Présentation du produit \ Resumen del producto \ 製品概要 \ Обзор продукта \ 产品外观

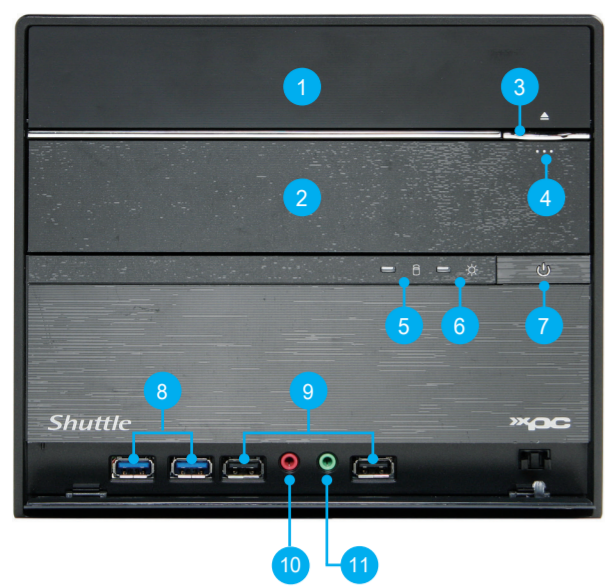

- 1. 5.25" Bay
- 2. 3.5" Bay
- 3. ODD eject button
- 4. 3.5" HDD bay cover button
- 5. Hard disk drive LED
- 6. Power LED
- 7. Power button
- 8. USB 3.1 Gen 1 ports
- 9. USB 2.0 ports
- 10. MIC-in
- 11. Headphones
- 12. AC power socket
- 13. Serial port (optional)
- 14. LAN ports
- 15. DisplayPort
- 16. Clear CMOS button
- 17. HDMI 2.0 port
- 18. USB 3.1 Gen 2 ports
- 19. Microphone jack
- 20. Front speaker out (L/R) port
- 21. Line-in port
- 22. Perforation for optional WLAN


Hardware Installation

硬體安裝 \ Hardware Installation \ Installation du matériel \ Instalación de hardware \ ハードウェアのインストール \ Установка оборудования \ 硬件安装


A. Begin Installation

For safety reasons, please ensure that the power cord is disconnected before opening the case.

- Unscrew 3 thumbscrews of the chassis cover.
- Slide the cover backwards and upwards.

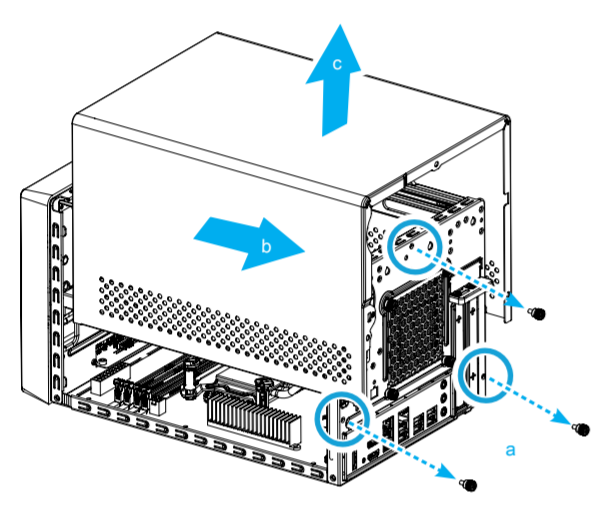


- Unfasten the rack mount screws and remove the rack.

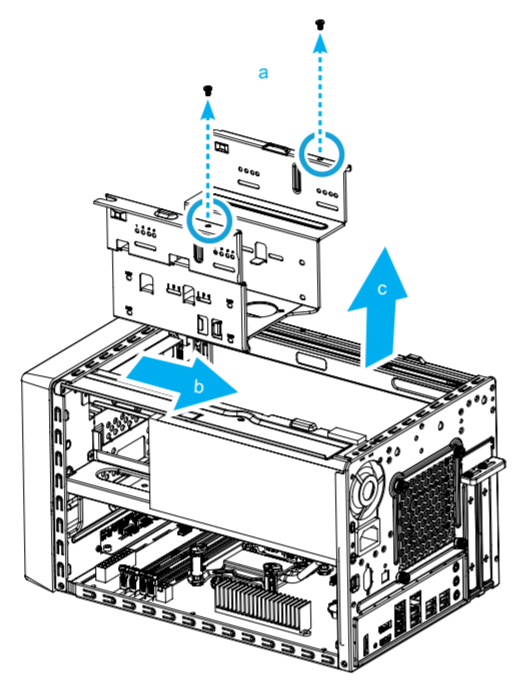

The product's colour and specifications may vary from the actually shipping product.

B. CPU and ICE Module Installation


- Unfasten the ICE fan thumbscrews on the back of the chassis.
- Unfasten the four ICE module attachment push-pins and unplug the fan connector.

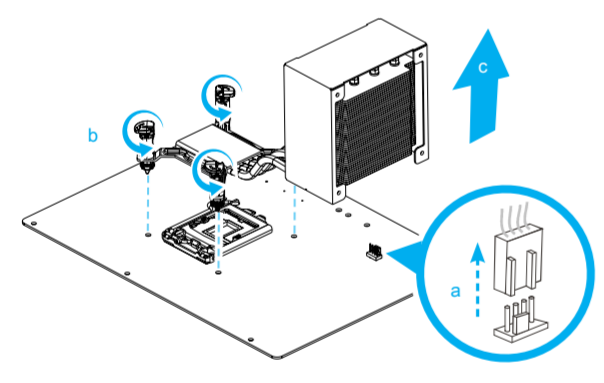


This CPU socket is fragile and can easily be damaged. Always use extreme care when installing a CPU and limit the number of times you remove or change the CPU. Before installing the CPU, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage of the CPU.

Follow the steps below to correctly install the CPU into the motherboard CPU socket.

- Unlock and raise the socket lever.

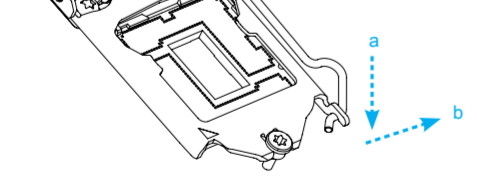


- Lift the metal load plate on the CPU socket.

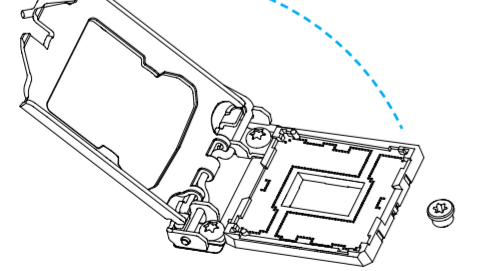


DO NOT touch the socket contacts. To protect the CPU socket, always use the protective socket cover when the CPU is not installed.

- Please orientate the CPU correctly and align the CPU notches with the socket alignment keys. Make sure the CPU sits perfectly horizontal, then push it gently into the socket.

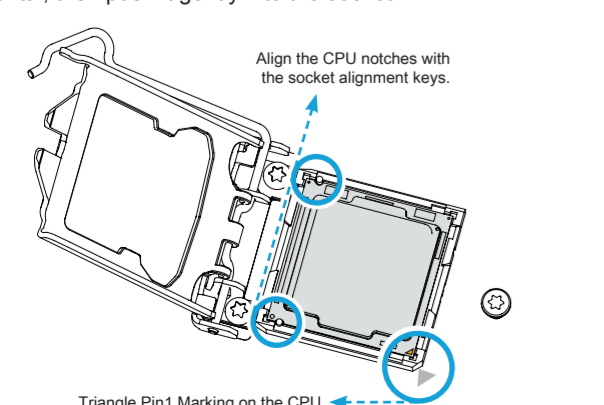


Please be aware of the CPU orientation, DO NOT force the CPU into the socket to avoid bending of pins on the socket and damage of CPU!

- Tear off the protective membrane from the metal load plate. Close the metal load plate, lower the CPU socket lever and lock in place.

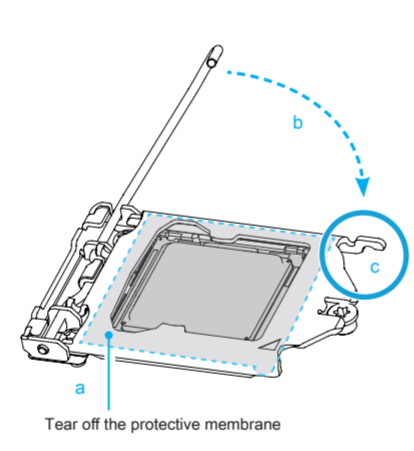


- Spread thermal paste evenly on the CPU surface.

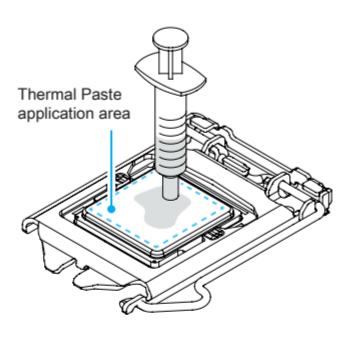


Please do not apply excess amount of thermal paste.

- Screw the ICE module to the motherboard. Note to press down on the opposite diagonal corner while tightening each push-pin.

- Connect the fan.

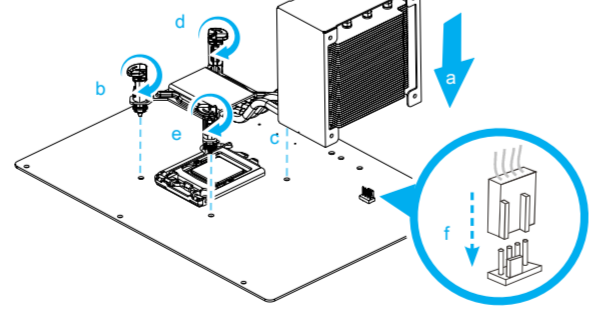

- Fasten the Smart Fan to the chassis with the four thumbscrews.

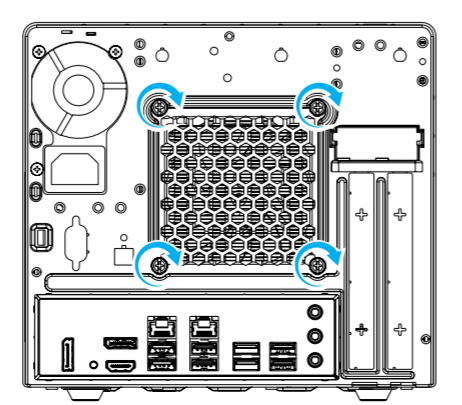


C. Memory Module Installation

Guidelines for Memory Configuration Before installing DIMMs, read and follow these guidelines for memory configuration.

Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips is used. (Go to Shuttle's website for the latest memory support list.) Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the module, reverse direction.


Population rules of dual channel memory modules In Dual-Channel mode, the memory modules can transmit and receive data with two data bus lines simultaneously. Enabling Dual-Channel mode can enhance system performance. The following illustrations explain the population rules for Dual-Channel mode.

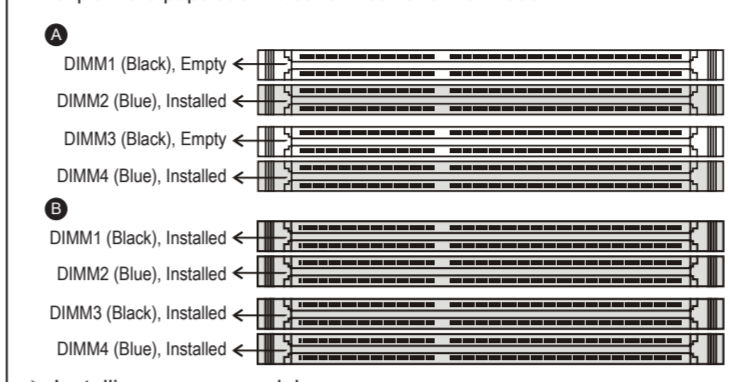

Installing memory modules DDR4 and DDR3/DDR2 DIMMs are not compatible to one another or other DDR DIMMs. Be sure to install DDR4 DIMMs on this motherboard only. Follow the steps below to correctly install your memory modules in the memory sockets.

- Unlock the DIMM latch.
- Align the memory module's cutout with the notch of the DIMM slot. Slide the memory module into the DIMM slot.

A DDR4 memory module has a cutout, so it only fits in one direction.

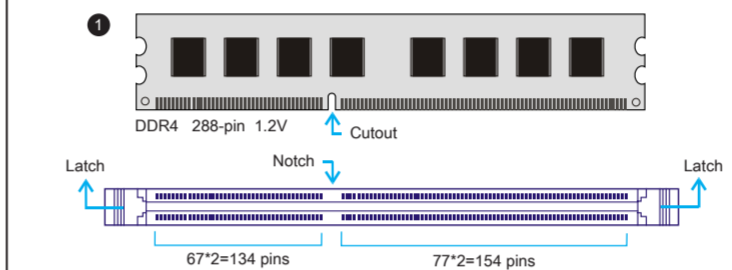


- Check if the latches are closed and if all memory modules are firmly installed.



Repeat the above steps to install additional memory modules, if required.

D. M.2 Device Installation

- Locate the M.2 key slots on the motherboard.

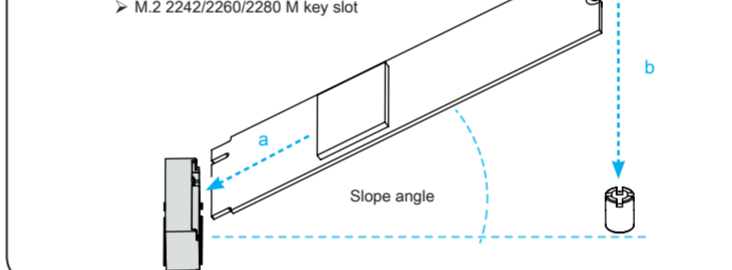


- Place the rack in the chassis and refasten the rack.

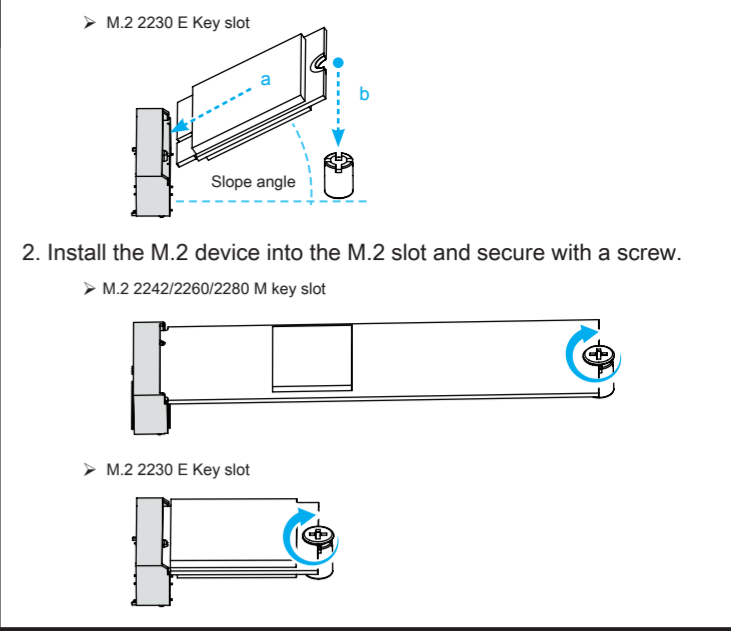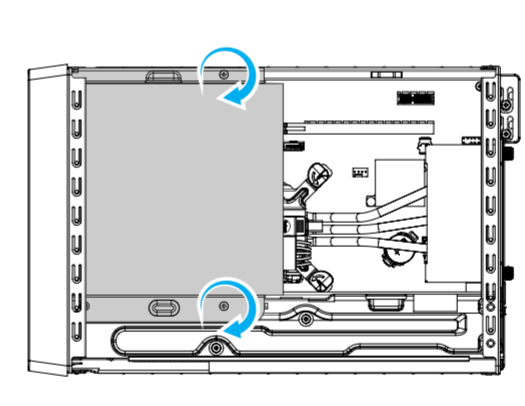


E. Installation of Drives


- Loosen the purse lock and separate the Serial ATA and power cables.
- Please place the HDD or SSD and the optical drive in the rack and secure with screws from the sides.

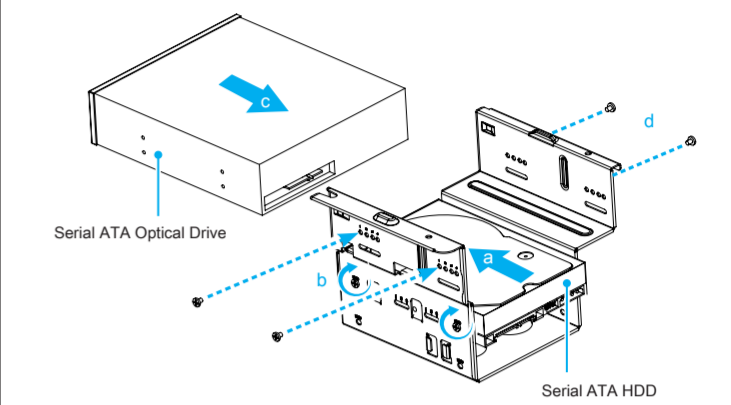


- Connect the Serial ATA cable to the motherboard.

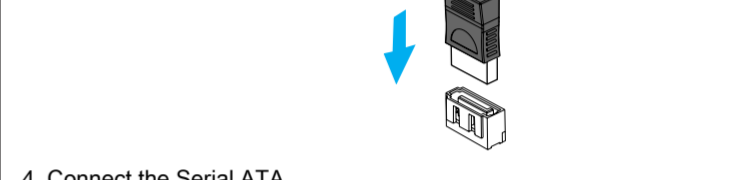

- Connect the Serial ATA and power cables to the HDD.

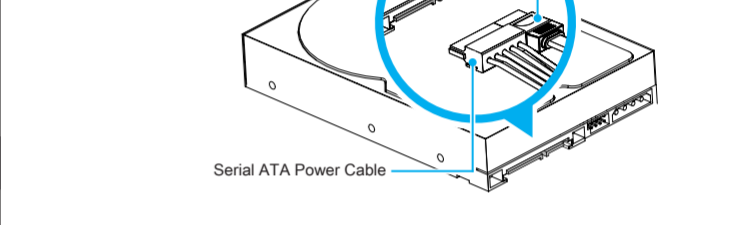


- Connect the Serial ATA and power cables to the optical drive.

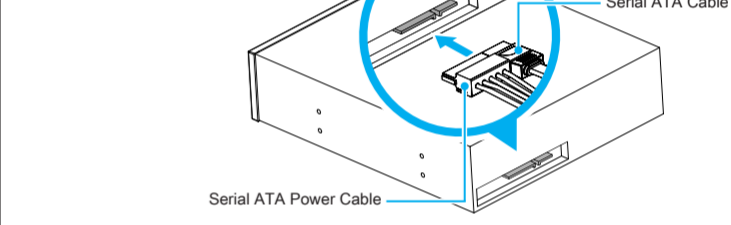

F. Installation of Expansion Cards


- Unfasten the expansion slot bracket screws. Remove the back panel bracket and put it aside.

The maximum size acceptable for display cards is 273mm(L) x 98mm(H) x 38mm(D).

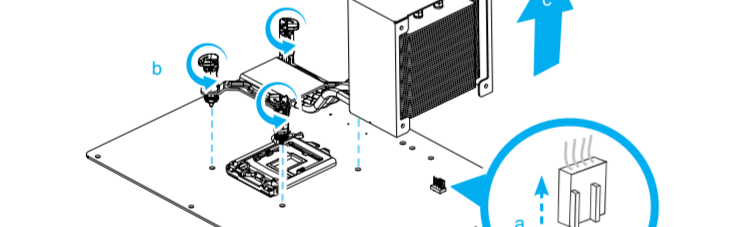

- Install the PCIe x4 / PCIe x16 card into the PCIe x4 / PCIe x16 slots.


Secure the bracket.

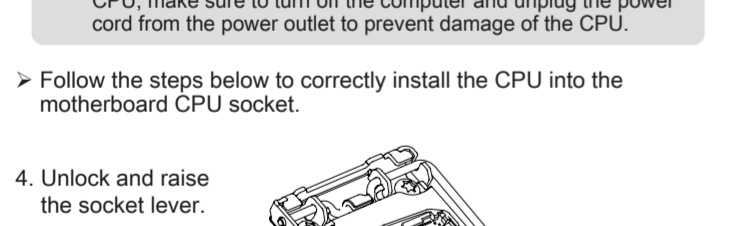

- Replace the cover and refasten the thumbscrews, then connect the power cord.


- Complete.

Please press the "Del" key while booting to enter BIOS. Here, please load the optimised BIOS settings.

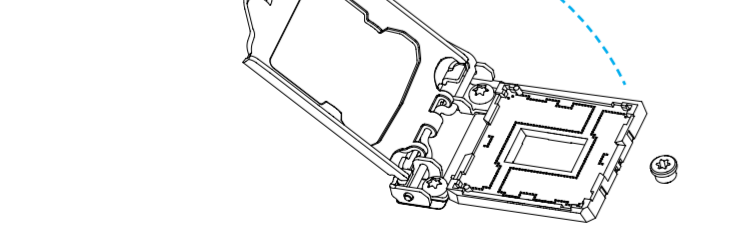

G. Complete

- Replace the cover and refasten the thumbscrews, then connect the power cord.
- Complete.

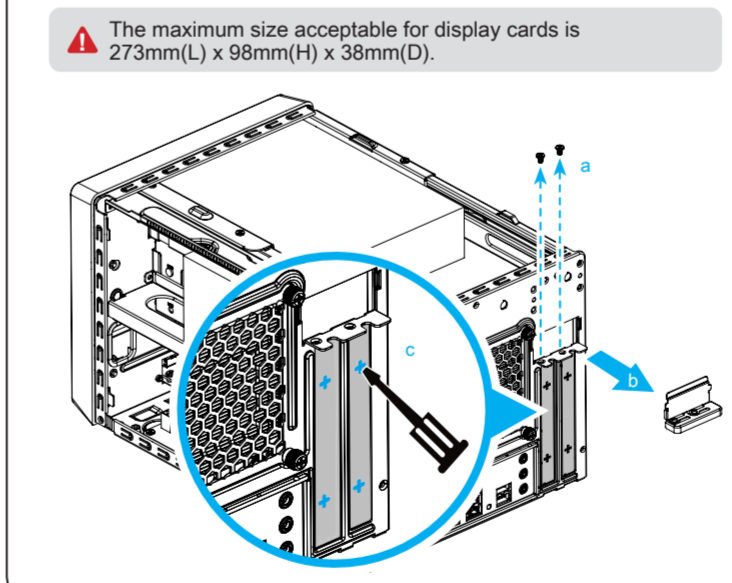

Safety Information

Incorrectly replacing the battery may damage this computer. Replace only with the same or equivalent as recommended by Shuttle. Dispose of used batteries according to the manufacturer's instructions.

更換電池方式錯誤可能會損壞本電腦以及引發爆炸、火災或其他危險。僅能依 Shuttle 的建議，以相同或同等之電池更換。請依照製造商的使用說明處理廢電池。

Das unkorrekte Austauschen der Batterie kann diesen Computer beschädigen. Ersetzen Sie die Batterie nur durch den von Shuttle empfohlenen Typ oder ein gleichwertiges Modell. Entsorgen Sie gebrauchte Batterien gemäß den Herstellerangaben.

Ne pas remplacer correctement la pile peut endommager l'ordinateur. Remplacez-la uniquement par un modèle identique ou un équivalent comme recommandé par Shuttle. Débarassez-vous des piles usagées d'après les instructions du constructeur.

La sustitución incorrecta de la batería puede dañar este equipo. Sustituya la batería únicamente por una igual o equivalente recomendada por Shuttle. Deseche las baterías usadas según las instrucciones del fabricante.

バッテリーを間違えてセットすると、このコンピュータが損傷する原因となります。交換する際は、Shuttle が推奨するバッテリーと同じものまたは同等のものだけを使用するようにしてください。使用済みバッテリーは、メーカーの指示に従って処分してください。

Неправильная замена батареи может привести к повреждению компьютера. Батарея должна соответствовать стандарту производителя Shuttle или быть идентичной предыдущей. Утилизация использованной батареи должна следовать инструкции производителя.

更換電池方式錯誤可能會損壞本電腦。僅能依 Shuttle 的建議，以相同或同等之電池更換。請依照製造商的使用說明處理廢電池。

Laser compliance statement: The optical disc drive in this PC is a laser product. The drive's classification label is located on the drive.

CLASS 1 LASER PRODUCT CAUTION: INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

雷射符合性聲明：本主機中的光碟機屬於雷射產品。光碟機等級標識貼於光碟機上。BEIM OFFENDES GERÄTES AUSSTREITEN. VERMEIDEN SIE ES, DEN STRAHLEN AUSGESETZT ZU WERDEN.

Etat de conformité du laser: Le lecteur de disque optique dans ce PC est un produit à laser. Le label de classification du lecteur laser est situé sur le lecteur.

PRODUIT LASER DE CLASSE 1 ATTENTION: RADIATIONS LASER A L'OUVERTURE. EVITER L'EXPOSITION AU FAISCEAU LASER.

Declaración de cumplimiento relacionada con el láser: La unidad de disco óptica de este servidor es un producto láser. La etiqueta de clasificación de la unidad se encuentra situada en dicha unidad.

PRODUCTO LÁSER DE CLASE 1 PRECAUCIÓN: RADIACIÓN LASER INVISIBLE CUANDO SE ABRE. NO SE EXPONGA AL HAZ.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device meets the requirements for the CE conformity in accordance to the currently valid EU directives. Dieses Produkt erfüllt die Anforderungen für die CE-Konformität entsprechend der aktuell geltenden EU-Richtlinien. Ce produit répond aux exigences du marquage CE conformément aux directives européennes actuellement en vigueur.

All bundled parts, power cord included, shall not be used without this product. 電源ケーブル等、すべての付属品は本機以外ではご使用になれません。

レーザー準拠声明：このサーバーの光ディスクドライブは、レーザ製品です。ドライブの分類シールは、ドライブに貼ってあります。

クラス1レーザ製品 注意：開けると目に見えないレーザー照射にさらされます。ビームへの暴露を避けてください。

Декларация соответствия лазера: Оптический привод на этом ПК представляет собой лазерный продукт. Маркировка диска находится на диске.

ЛАЗЕРНЫЙ ПРОДУКТ КЛАССА 1 ПРЕДУПРЕЖДЕНИЕ: НЕВИДИМОЕ ЛАЗЕРНОЕ ИЗЛУЧЕНИЕ, КОГДА ОТКРЫТО. Избегайте воздействия радиации.

雷射符合性聲明：本主機中的光碟機屬於雷射產品。光碟機等級標識貼於光碟機上。


CLASS 1 雷射產品 注意：打開時會有不可見的雷射光放射，避免曝露於雷射光束下。

注意：仅适用于在非热带气候条件下安全使用，在热带气候条件下使用时，可能有安全隐患。

注意：仅适用于海拔 2000m 以下安全使用，在海拔 2000m 以上使用时，可能有安全隐患。

注意：允许产品使用的最高环境温度为 40°C。

注意：用错误型号电池更换会有爆炸危险，务必按照说明处用充用的电池。

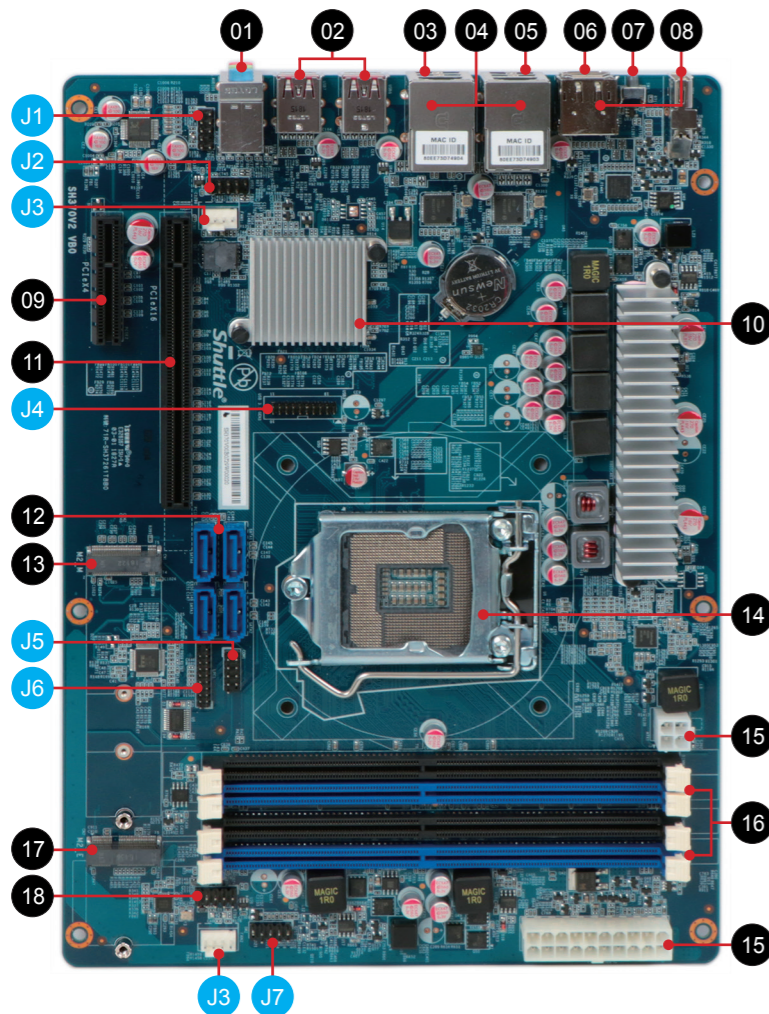

01. Line-in port
音源輸入埠
Audio Line-In Eingang
Port d'entrée ligne
Entrada de audio Line-in
ラインインポート
Линейный вход
音源輸入端口

Front speaker out (L/R) port
左 / 右聲道輸出埠
Lautsprecher-Anschluss/Line-Out
Sortie audio avant (G/D)
Salida de audio Line-out
正面アウト (L/R) ポート
Линейный выход
左 / 右声道輸出端口

Microphone jack
麥克風輸入埠
Mikrofon-Anschluss
Entrée Micro
Entrada del micrófono
マイクインポート
Гнездо для микрофона
麦克风连接端口

02. USB 3.1 Gen 2 ports
USB 3.1 Gen 2 連接埠
USB 3.1 Gen 2-Anschlüsse
Prises USB 3.1 Gen 2
Puertos USB 3.1 Gen 2
USB 3.1 Gen 2 ポート
USB 3.1 Gen 2 порты
USB 3.1 Gen 2 端口

03. USB 3.1 Gen 1 ports
USB 3.1 Gen 1 連接埠
USB 3.1 Gen 1-Anschluss
Prises USB 3.1 Gen 1
Puertos USB 3.1 Gen 1
USB 3.1 Gen 1 ポート
USB 3.1 Gen 1 порты
USB 3.1 Gen 1 端口

14. Processor socket LGA1151v2
LGA1151v2 處理器插座
Socket für LGA1151v2-CPUs
Socket Processeur LGA1151v2
Zócalo LGA1151v2 de CPU
Процессорный Socket LGA1151v2
Разъем процессора LGA1151v2
LGA1151v2 处理器插座


15. ATX power connector
電源連接埠
ATX-Netzteil-Anschluss
Prise d'alimentation ATX
Conector de alimentación ATX
ATX 電源コネクタ
ATX 電源连接器
ATX 电源插座

16. 4x 288-pin DDR4 DIMM slot
4x 288-pin DDR4 DIMM 插槽
4x 288-pin DDR4 DIMM Steckplatz
4x emplacements 288-pin pour DDR4 DIMM
4 ranuras DIMM DDR4 de 288 contactos Slots
4x 288-pin DDR4 DIMM 插槽
4x 288 контактный Slot DDR4 DIMM
4x 288-pin DDR4 DIMM 插槽

17. M.2 2230 E key slot
M.2 2230 E key 插槽
M.2-2230 (E) Steckplatz
Emplacement M.2 2230 E
Ranura M.2 2230 E
M.2 2230 E キースロット
Слот M.2 2230 E ключ
M.2 2230 E key 插槽


18. USB header
USB 插座
USB-Anschluss
Connecteur USB
Base de conexiones USB extendida
USB コネクタ
USB 插座

J1 Front audio header
前面板音效插座
Audio-Anschluss für Vorderseite
Connecteur audio pour façade
Conector de audio del panel frontal
前面オーディオヘッダ
Передний аудио разъем
前面板音效插座

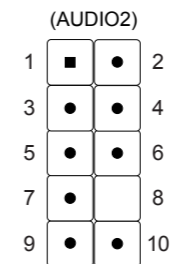


1=MIC_L 2=GND 3=MIC_R 4=Front_Detect 5=LINE_R 6=Mic_detect 7=Sense 8=NULL 9=LINE_L 10=Line_Detect

J2 USB header
USB 插座
USB-Anschlüsse
Connecteur USB
Base de conexiones USB extendida
USB コネクタ
USB 插座

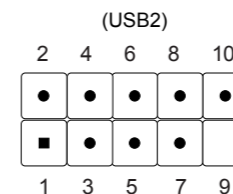


1=5V_USB 2=5V_USB 3=USB_A_N 4=USB_B_N 5=USB_A_P 6=USB_B_P 7=GND 8=GND 9=NULL 10=GND

J3 FAN connectors
風扇插座
Lüfteranschluss
Connecteur ventilateur
Conector del ventilador
FAN コネクタ
Разъемы вентиляторов
风扇插座

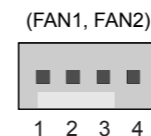


1=GND 2=+12V 3=SPEED_SENSE 4=PWM_CTRL

J4 USB 3.0 header
USB 3.0 插座
USB 3.0-Anschluss
Connecteur USB 3.0
USB 3.0 encabezamiento
USB 3.0 コネクタ
Разъем USB 3.0
USB 3.0 插座

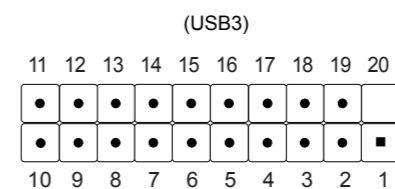


1=5VCC 2=A_RX_N 3=A_RX_P 4=GND 5=A_TX_N 6=A_TX_P 7=GND 8=A_USB_N 9=A_USB_P 10=NA 11=B_USB_P 12=B_USB_N 13=GND 14=B_TX_P 15=B_TX_N 16=GND 17=B_RX_P 18=B_RX_N 19=5VCC NULL

J5 COM header
COM 插座
COM-Anschluss
Connecteur COM
Base de conexiones COM
COM コネクタ
Разъем COM
COM 插座

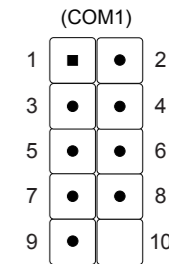


1=DCD 2=RXD 3=TXD 4=DTR 5=GND 6=DSR 7=RTS 8=CTS 9=XRI1 10=NULL

J6 LPC header
LPC 插座
LPC-Anschluss
LPC Header
Base de conexiones LPC
LPC コネクタ
Разъем LPC
LPC 插座

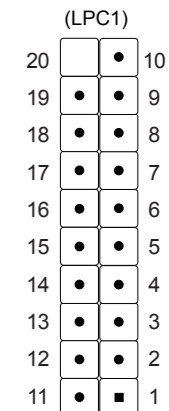

1=+12V 2=+5V 3=5V_DUAL 4=SERIRQ 5=LPT24M_1 6=LPT24M_2 7=SIORST- 8=LFRAME- 9=LAD3 10=LAD2 11=-12V 12=3VSB 13=NA 14=LDRQ0 15=PCH_PME- 16=LAD1 17=LAD0 18=+3.3V 19=GND 20=NULL

J7 Connector for front buttons/LEDs
電源按鈕 / LED 插座
Anschluss für vordere Buttons/LEDs
Connexion pour les boutons en façade
Conexión para pulsadores frontales/LEDs
フロントボタン LED 用コネクタ
Разъем для кнопок / LED-индикаторов передней панели
电源按钮 / LED 插座

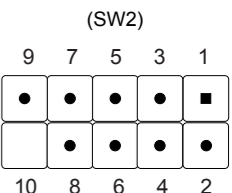

1=+HD_LED 2=PWR_LED 3=-HD_LED 4=GND 5=RST_SW- 6=PWR_SW- 7=GND 8=GND 9=NA 10=NULL

04. LAN ports
網路連接埠
Netzwerk-Anschlüsse
Prises LAN
Puertos LAN
LAN ポート
Сетевые LAN-порты
LAN 连接端口

09. PCIe x4 slot
PCIe x4 插槽
PCIe x4 Steckplatz
Slot PCIe x4
PCIe x4 Ranura
PCIe x4 スロット
Слоты PCIe x4
PCIe x4 插槽

05. USB 2.0 ports
USB 2.0 連接埠
USB 2.0-Anschlüsse
Prises USB 2.0
Puertos USB 2.0
USB 2.0 ポート
USB 2.0 порты
USB 2.0 连接端口

10. Intel® H370 Chipset
Intel® H370 晶片組
Intel® H370 Chipsatz
Intel® H370 Chipset
Intel® H370 Conjunto de chips
Intel® H370 チップセット
Набор микросхем Intel® H370
Intel® H370 晶片組

06. HDMI 2.0 port
HDMI 2.0 連接埠
HDMI 2.0-Anschluss
Prise HDMI 2.0
Puerto HDMI 2.0
HDMI 2.0 ポート
HDMI 2.0 порт
HDMI 2.0 连接端口

11. PCIe x16 slot
PCIe x16 插槽
PCIe x16 Steckplatz
Slot PCIe x16
PCIe x16 Ranura
PCIe x16 スロット
Слоты PCIe x16
PCIe x16 插槽

07. Clear CMOS button
清除 CMOS 鈕
Clear CMOS Button
Bouton de reset CMOS
Botón clear CMOS
クリア CMOS ボタン
Кнопка сброса памяти CMOS
清除 CMOS 鈕

12. SATA 3.0 6Gb/s connector
SATA 3.0 6Gb/s 插槽
SATA 3.0-Anschlüsse (6 Gb/s)
Connecteurs SATA 3.0 6Gb/s
Base de conexiones SATA 3.0 6Gb/s
SATA 3.0 6Gb/s コネクタ
Разъем SATA 3.0 6 Гбит/с
SATA 3.0 6Gb/s 接口

08. DisplayPort
DisplayPort 連接埠
DisplayPort
Prise DisplayPort
DisplayPort
ディスプレイポート
DisplayPort
DisplayPort 连接端口

13. M.2 2242/2260/2280 M key slot
M.2 2242/2260/2280 M key 插槽
M.2-2242/2260/2280 (M) Steckplatz
Emplacement M.2 2242/2260/2280 M
Ranura M.2 2242/2260/2280 M
M.2 2242/2260/2280 M キースロット
Слот M.2 2242/2260/2280 M ключ
M.2 2242/2260/2280 M key 插槽